



HTC One M8 Battery Replacement

Replace the battery.

Written By: Mitchell Keller



INTRODUCTION

Use this guide to replace the battery in your HTC One M8.

Please note that your device may have a large amount of copper shielding and tape covering the back of the display assembly, as shown [here](#). If this is the case, you'll need to gently remove it to get at the motherboard.



TOOLS:

- [iOpener](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [SIM Card Eject Tool](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — SIM Card



- Insert a SIM card ejector tool or a paperclip into the small hole in the SIM card tray, located on the upper left hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

Step 2




- Remove the SIM card tray assembly from the HTC One M8.
- ⓘ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

Step 3 — MicroSD Card



- Insert a SIM card eject tool or a paperclip into the small hole in the microSD card tray, located on the upper right hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

Step 4

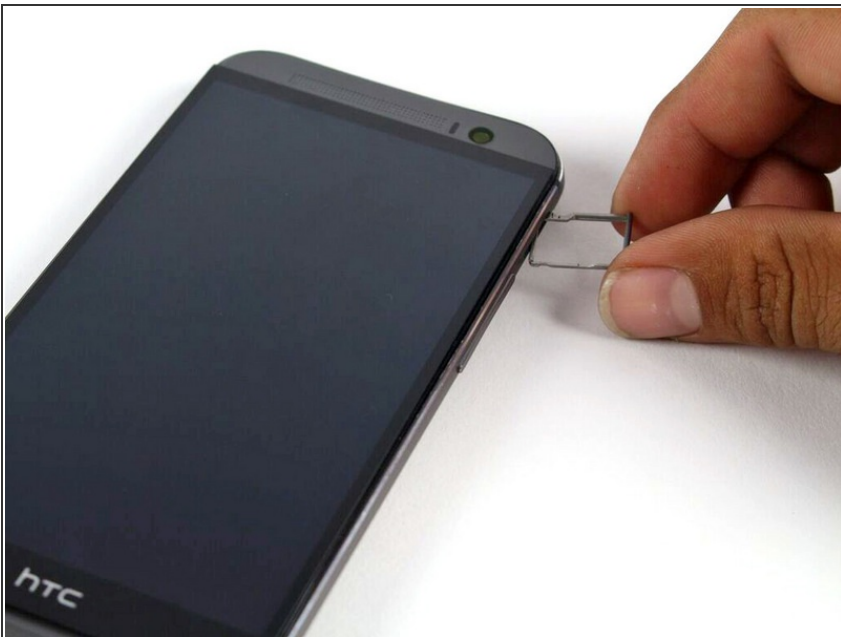

- Remove the microSD card tray assembly from the HTC One M8.
- ★ When reinserting the microSD card, ensure that it is in the proper orientation relative to the tray.

Step 5 — Rear Case




- Use an iOpener or heat gun to loosen the adhesive on the upper and lower speaker grilles.
- ⓘ Refer to the [iOpener guide](#) for info on how to use the iOpener.

Step 6




- Use a plastic opening tool to gently peel up the lower speaker grille.
- ⓘ The adhesive is messy, and can be removed using Goo-gone.

Step 7

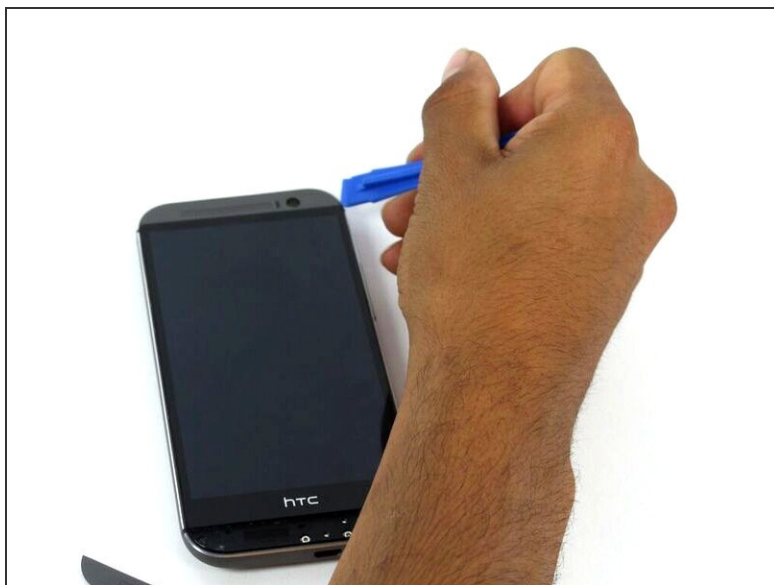

- Use a plastic opening tool to gently peel up the upper speaker grille.

Step 8

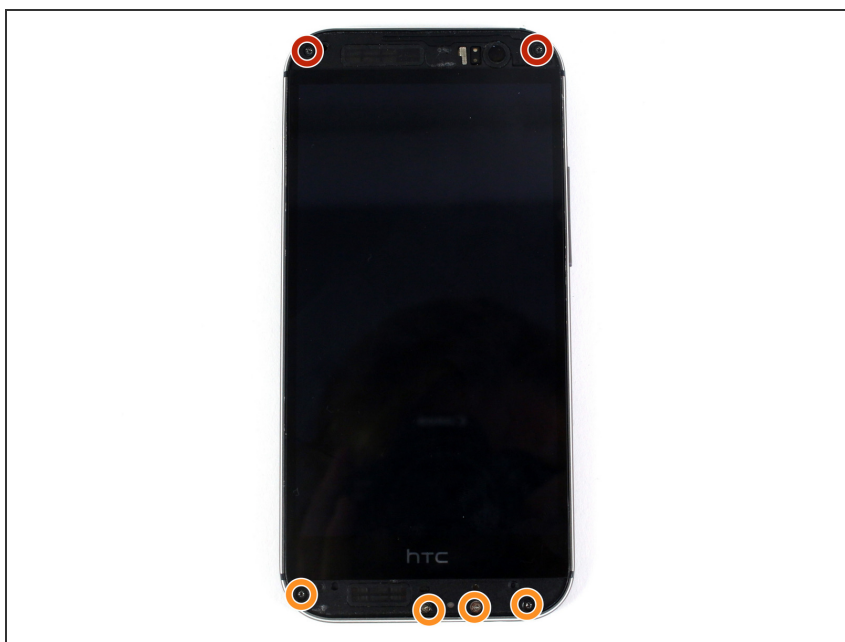

- Remove the two silver 3 mm Phillips #00 screws from the top.
- Remove the four black 4 mm T5 Torx screws from the bottom.

Step 9




- Work your way around the perimeter of the phone with a spudger and plastic opening picks to free the clips that secure the rear case to the display assembly.
 - ❗ A metal spudger is pictured, but it is best to use a nylon spudger to prevent marring the device.
 - ❗ Be careful not to lose the power button: it sits loosely in the top of the lower chassis.
- ⚠ Significant force may be required to pry the casing apart.

Step 10 — Motherboard



- Remove the two silver 2 mm Phillips #00 screws securing the battery connector to the motherboard.
- Use a plastic opening tool to gently pry up the battery connector.

Step 11

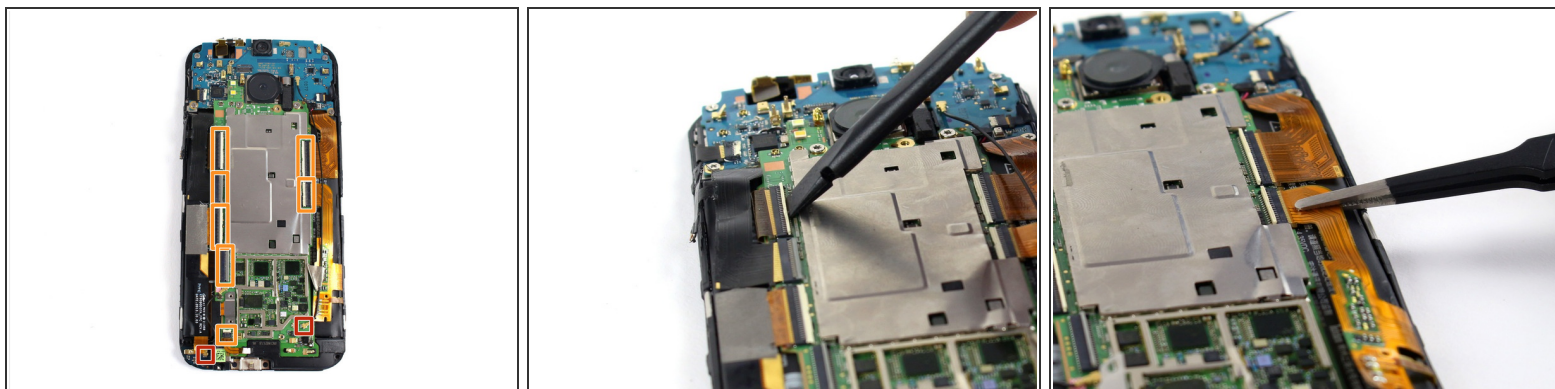

- Use a spudger to disconnect the two antenna cables.
- Use the tip of a spudger to disconnect the seven ZIF connectors.
- Use a pair of tweezers to gently pull the seven ribbon cables free of the connectors.

Step 12




- Remove three silver 3mm screws using T5 screwdriver.

Step 13



- Use an iOpener or a heat gun to loosen up the adhesive securing the motherboard to the display assembly.
- Use a plastic opening tool to gently pry the motherboard free of the display assembly.
- ❗ At this point, the bottom speaker is still attached to the motherboard. If you are only replacing the motherboard, refer to the [bottom speaker guide](#) to swap your existing speaker to the new motherboard.

Step 14 — Battery

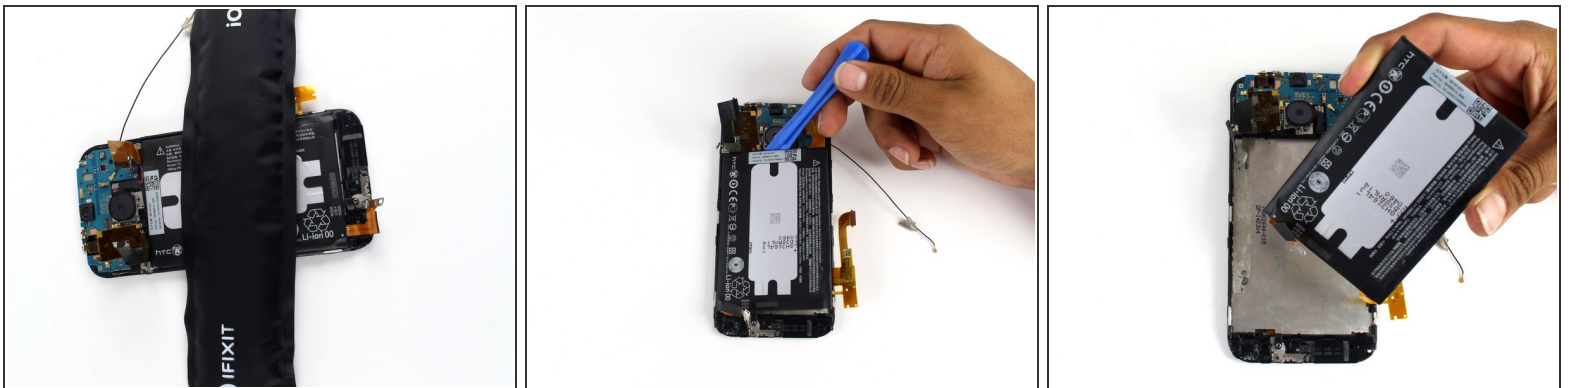

- Gently bend the various ribbon cables out of the way of the battery.
- Use an iOpener or heat gun to loosen up the adhesive securing the battery to the display assembly.
- Use a plastic opening tool to gently pry up the battery from the display assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 08:51:56 AM.